






Step 1
Place fine, loose
compost soil on
top of existing
ground to reach
four inches deep.

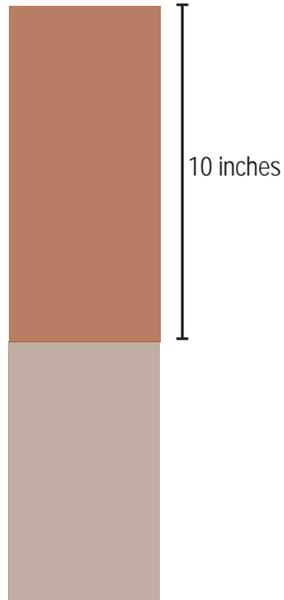

Step 2
Incorporate the
new soil into the
existing soil, going
10 inches deep.

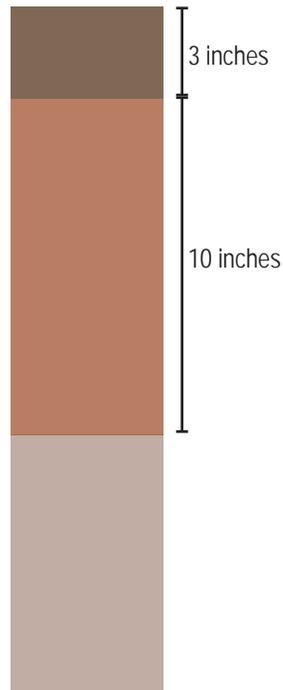

Step 3
Install wood chip
mulch 3 inches
deep on top of the
new soil.

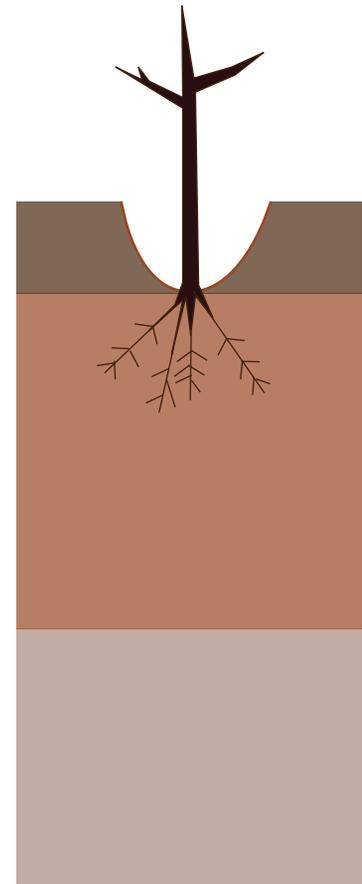

Step 4
Plant native trees and shrubs
in newly added soil. Perform
maintenance over the next few
years