FIELD WIRE TERMINATIONS

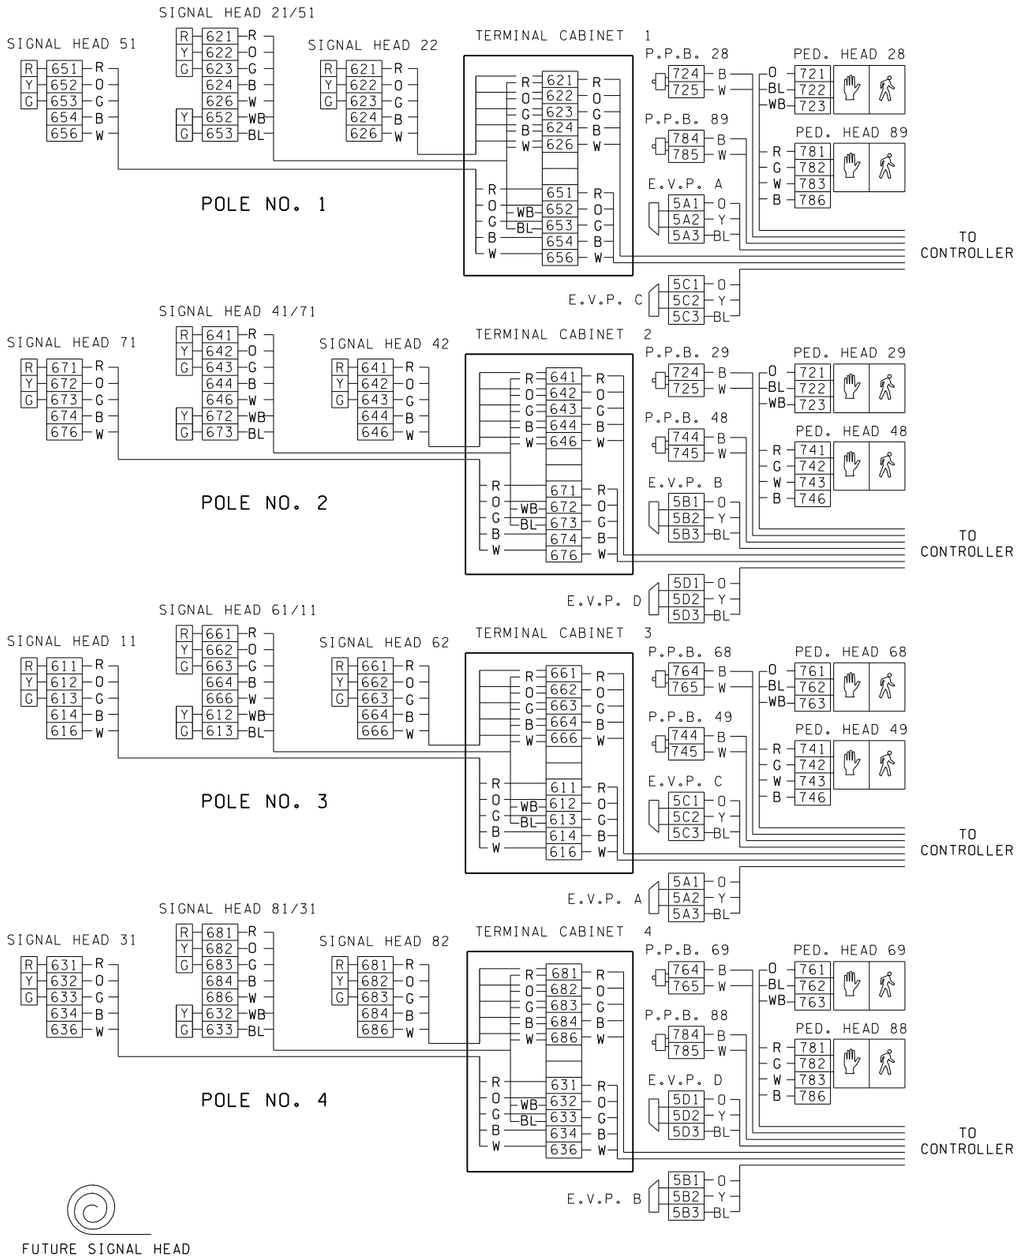

CABINET WIRE TERMINATIONS

DETECTION INPUT TERMINALS

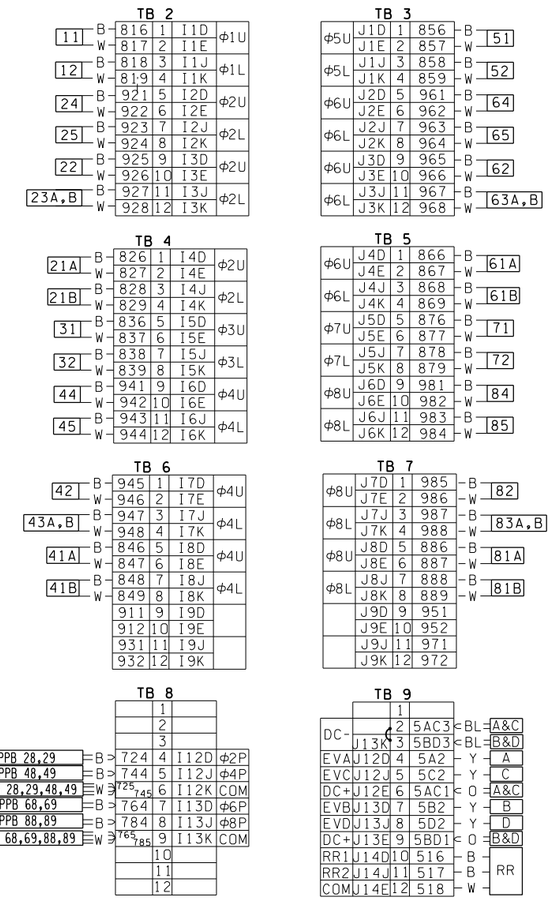

DISPLAY OUTPUT TERMINALS

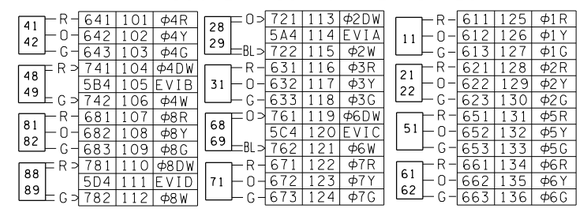

COORDINATION

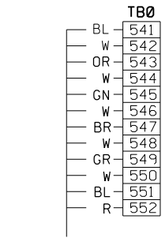

SERVICE PANEL



AUXILIARY PREEMPTION

(CONNECTED VIA 262W WIRE HARNESS TO M262 DISCRIMINATOR)

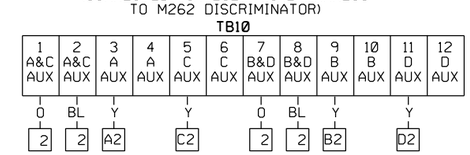

NOTE: TERMINATE ALL WIRING IDENTIFIED AS AC- (6*6 AND 7*3) AT THE AC- BUSS.

SEAL AND COIL ALL SPARE CONDUCTORS AND STORE NEATLY ON THE CABINET FLOOR.

AFTER FIELD WIRES ARE INSTALLED, INSTALL 2C(SH) JUMPER WIRES BETWEEN THE FOLLOWING INPUT TERMINAL PAIRS:

816 --B-- 967
817 --W-- 968

856 --B-- 927
857 --W-- 928

876 --B-- 947
877 --W-- 948

836 --B-- 987
837 --W-- 988

DELETE THIS SECTION IF THE 239 PROGRAM IS SPECIFIED

FILE NAME	S:\414126\Electrical\MASTER_FILES\DETAILS Homepage\Signal.dgn						
TIME	02:58:10 PM	LOOP TERMINATIONS FOR #2 & #5 LOOPS	8/21/01	KC	REGION NO. 10	STATE WASH	FED.AID PROJ.NO.
DATE	04/07/2005	PHASE SYMB. REPLACED TO CAB. WIRE TERM.	6/26/01	TC			
		TB2-TB7 DET.INPUT CHANGES	4/19/01	JH	JOB NUMBER		
DESIGNED BY	WSDOT	CHANGED FONTS	7/09/99	JH			
ENTERED BY	WSDOT	NEW SHEET DESIGNATION	6/24/97	BK			
CHECKED BY	WSDOT	SERVICE PANEL "GRD"	6/13/97	BK	CONTRACT NO.		LOCATION NO.
PROJ. ENGR.		TERMINAL CAB. NOS.	4/29/97	BK			
REGIONAL ADM.		REVISION	DATE	BY			

P.E. STAMP BOX DATE

P.E. STAMP BOX DATE

Washington State Department of Transportation

ENGLISH

WIRING TERMINATIONS

PLOT13

2.03E

SHEET OF SHEETS