FIELD WIRE TERMINATIONS

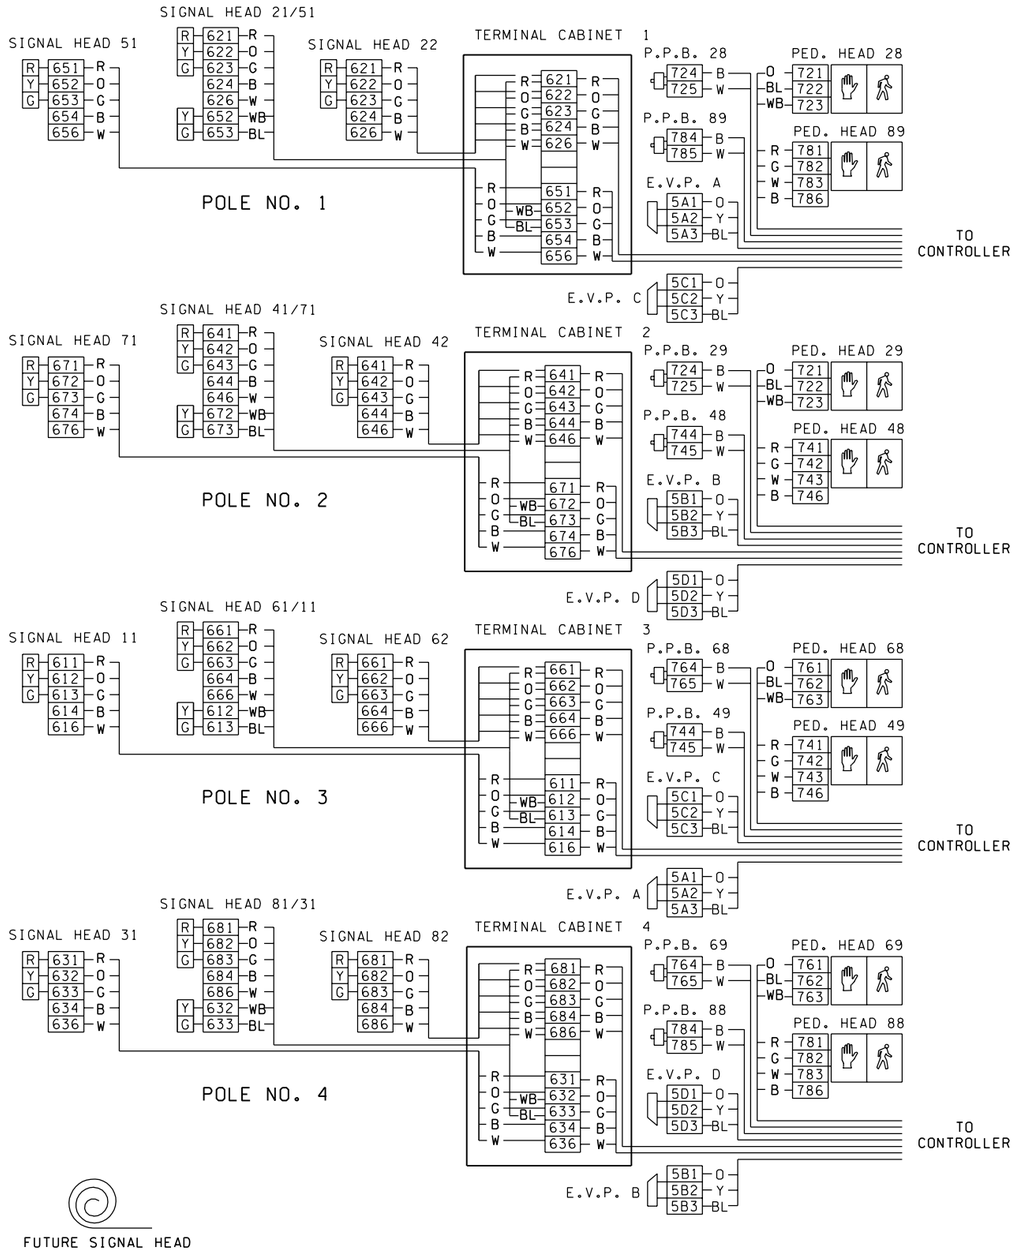

CABINET WIRE TERMINATIONS

DETECTION INPUT TERMINALS

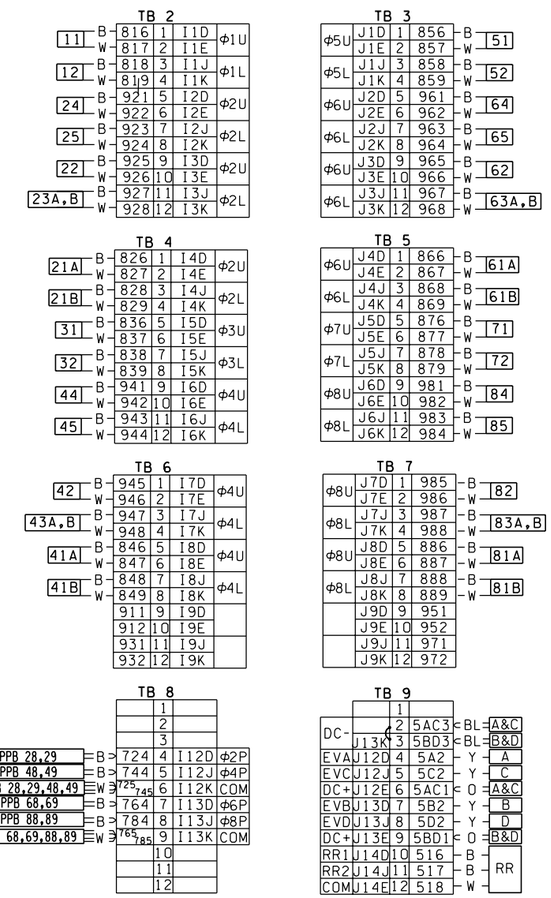

DISPLAY OUTPUT TERMINALS

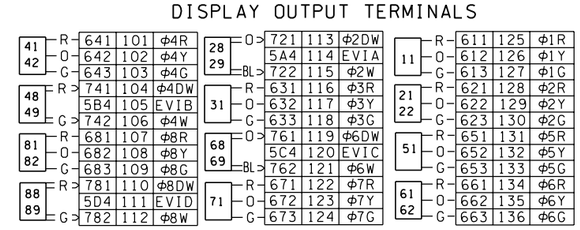

COORDINATION

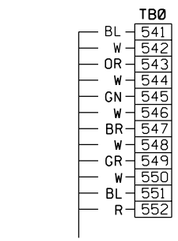

SERVICE PANEL



AUXILIARY PREEMPTION

(CONNECTED VIA 262W WIRE HARNESS TO M262 DISCRIMINATOR)

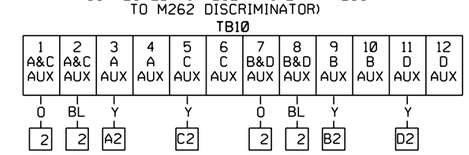

NOTE: TERMINATE ALL WIRING IDENTIFIED AS AC- (6*6 AND 7*3) AT THE AC-BUSS.

SEAL AND COIL ALL SPARE CONDUCTORS AND STORE NEATLY ON THE CABINET FLOOR.

AFTER FIELD WIRES ARE INSTALLED, INSTALL 2C(SH) JUMPER WIRES BETWEEN THE FOLLOWING INPUT TERMINAL PAIRS:

816 --B-- 967
817 --W-- 968

856 --B-- 927
857 --W-- 928

876 --B-- 947
877 --W-- 948

836 --B-- 987
837 --W-- 988

DELETE THIS SECTION IF THE 239 PROGRAM IS SPECIFIED

FILE NAME	s:\414126\Electrical\MASTER_FILES\DETAILS\SIGNAL_E.DGN						PLOT13
TIME	07:25:15 AM	LOOP TERMINATIONS FOR *2 & *5 LOOPS	8/21/01	KC	REGION NO. 10 / STATE WASH	FED.AID PROJ.NO.	2.03E
DATE	08/14/2002	PHASE SYMB. REPLACED TO CAB. WIRE TERM.	6/26/01	TC			
		TB2-TB7 DET.INPUT CHANGES	4/19/01	JH	JOB NUMBER		SHEET OF SHEETS
DESIGNED BY	WSDOT	CHANGED FONTS	7/09/99	JH			
ENTERED BY	WSDOT	NEW SHEET DESIGNATION	6/24/97	BK			
CHECKED BY	WSDOT	SERVICE PANEL "GRD"	6/13/97	BK	CONTRACT NO.	LOCATION NO.	
PROJ. ENGR.		TERMINAL CAB. NOS.	4/29/97	BK			
REGIONAL ADM.		REVISION	DATE	BY			

P.E. STAMP BOX DATE

P.E. STAMP BOX DATE

Washington State Department of Transportation

ENGLISH

WIRING TERMINATIONS