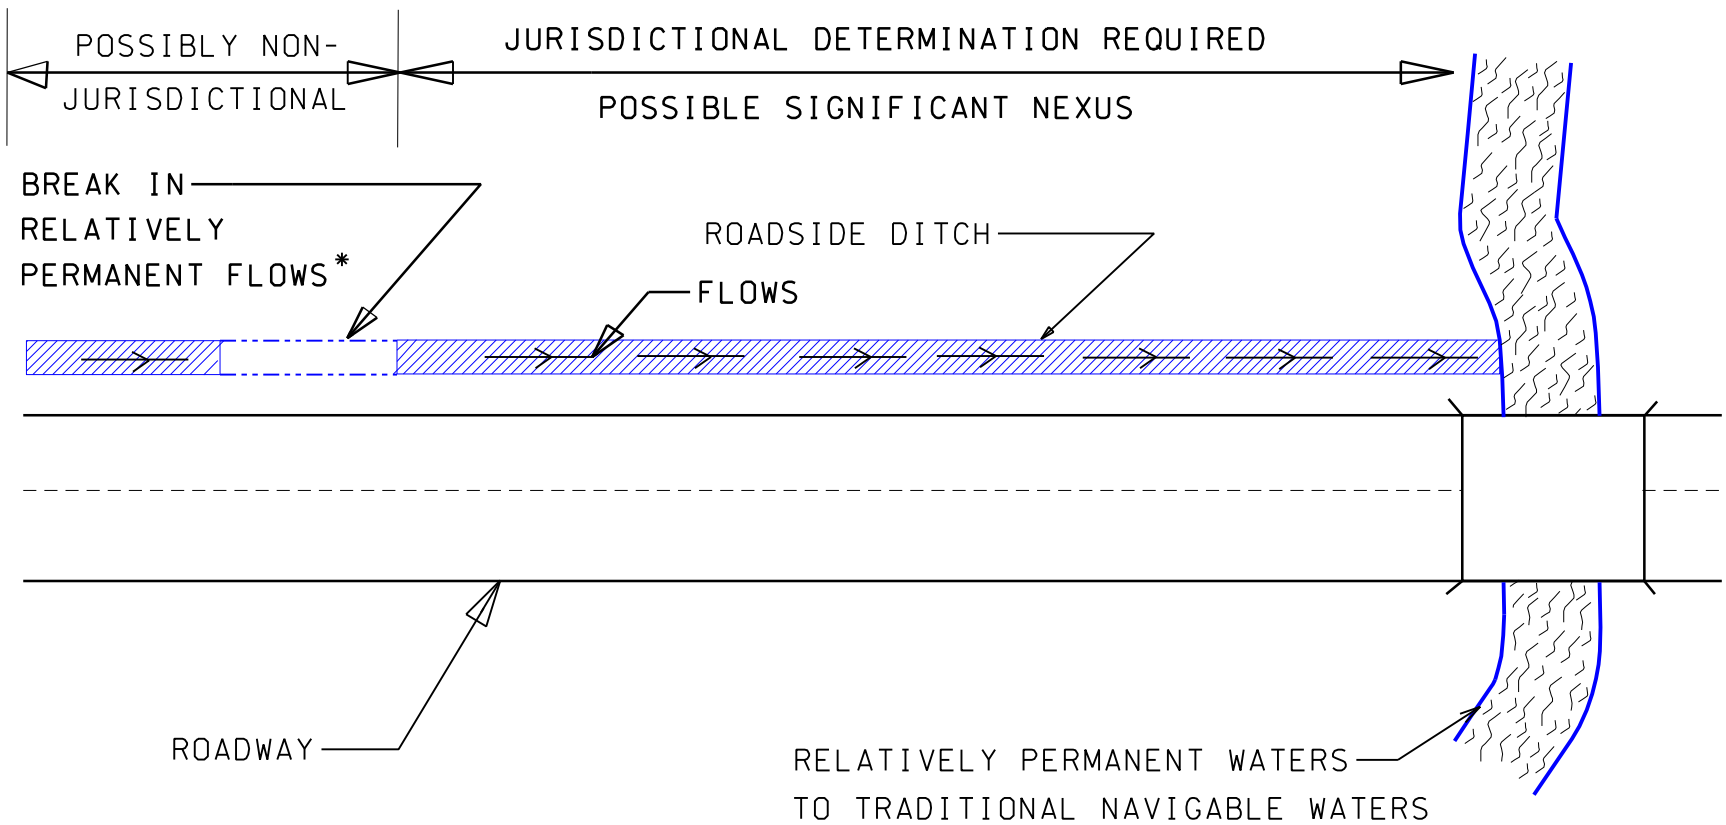

*WHEN THERE IS NO EVIDIENCE OF AN OWHM STOP, LOOK AROUND FOR POTENTIAL SHEET FLOW CONNECTION TO OTHER WATERS OF THE US. NOTE OBSERVATIONS IN THE SUBMITTAL PACKAGE TO THE CORPS.

ROADSIDE DITCH WITH
"RELATIVELY PERMANENT FLOW" INDICATORS
INCLUDING BREAK IN FLOWS

(OHWM Used To Establish Relatively Permanent Flows)

FIGURE 2